


THE FACTS ABOUT INDUS[®] CPVC

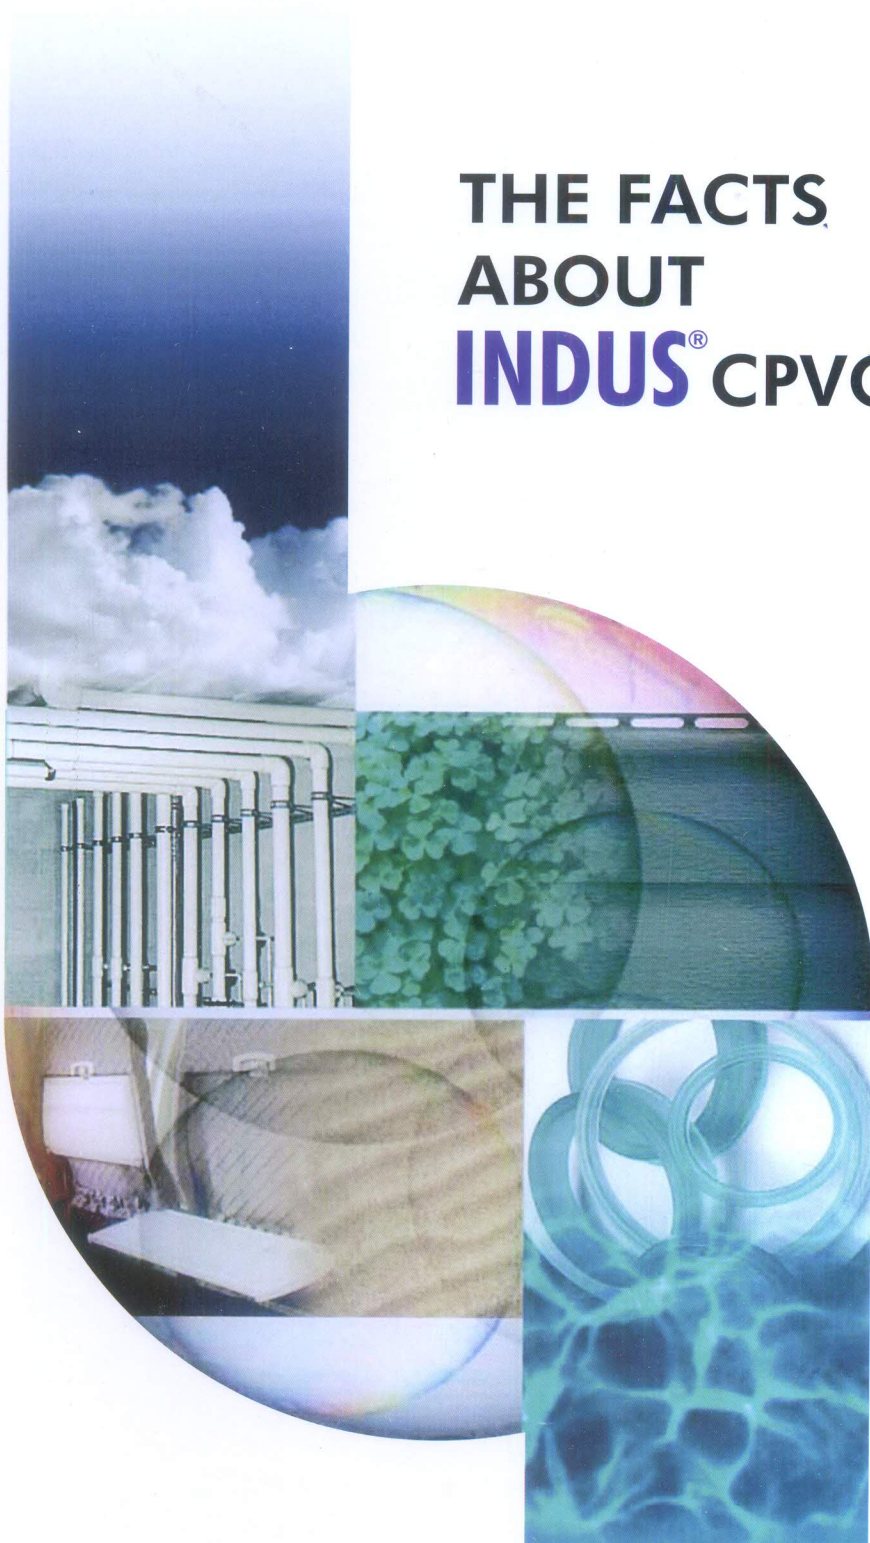

How it Impacts
The Environment
& Our
Everyday Lives.

THE INDUS CPVC JOINTING PROCESS

Easy installation in 6 Steps



Cut pipe squarely using a wheel-type plastic tubing cutter.



use a chamfering tool for file to remove burrs and fittings from the inside and outside of the pipe.



Wipe any dirt or moisture from the fitting sockets and tubing end.



Apply a heavy, even coat of cement on the tubing end.



Apply a thin coat inside the fitting socket.




Immediately insert the tubing into the fitting socket, rotating the tubing while inserting and hold for 30 sec.

All you need:



A pipe cutter



A fine file



CPVC solvent cement

NOT needed:



انڈس پائپ اینڈ فٹنگ

انڈس سی پی وی سی کو جوڑنے کا طریقہ کار

کن چیزوں کی آپ کو ضرورت ہے

6 اقدامات کے ذریعے آسان تنصیب



ویل نائپ پلاسٹک ٹیوبنگ کٹر استعمال کرتے ہوئے پائپ کو چوکور انداز میں کاٹیں



فائن فائل یا ٹیمفرنگ ٹول کے ذریعے براوے کو صاف کریں اور پائپ کی اندرونی اور بیرونی سطح کو ہموار کریں



ٹیوب کے آخری سرے اور نصب ساکٹوں سے دھول مٹی اور رطوبت کو صاف کریں



ٹیوب کے آخری سرے پر سیمنٹ کی موٹی تہ لگائیں اور اسے ہموار کریں



نصب ساکٹ کے اندر سیمنٹ کی پتلی تہ لگائیں



فوراً ٹیوب کے نصب ساکٹ میں داخل کر دیں۔ کم از کم پائپ کو 1/4 تک گھمائیں اور 30 سیکنڈ تک پکڑے رہیں۔



ایک پائپ کٹر



فائن فائل



سی پی وی سی سیمنٹ کا محلول

اس کی ضرورت نہیں

